

<p>Find the perfect fit for your digital camera.</p>	 Neo's Digital 12 Model 3812	 Ultra-Thin Digital Model 5680	 Ultra-Compact Digital Model 5686	 Pro Compact Digital Model 5689	 Compact Digital Model 5690	 Digital 1 Model 5691	 Digital 2 Model 5692	 Digital 3 Model 5693	 Digital 6 Model 5696
OTHER MODELS		3453, 3582, 3583, 3584, 3803, 3814, 5204, 5412	3584, 3805, 5206, 5412		3586, 3807, 5214, 5290, 5415	3585, 5217, 5417	5292	5294	5230, 5682
Digital Cameras									
CANON									
SD750, SD770IS, SD780IS, SD790IS, SD940IS, SD1000	✓	✓							
SD870IS, SD880IS, SD890IS, SD970IS, SD1100IS, SD1200IS		✓							
A480, A1000IS, A1100IS, S90, SD950IS, SD960IS, SD980IS, SD990IS			✓						
A470, A580, A2000IS, A2100IS, E1, SX200IS				✓		✓			
A590IS, D10, G9, G10, G11, SX100IS, SX110IS, SX120IS				✓			✓		
SX11S, SX10IS, SX20IS									✓
CASIO									
EX-Z80, EX-Z85, EX-Z90, EX-Z450	✓	✓							
EX-S5, EX-S10, EX-S12, EX-S770, EX-S880, EX-Z9, EX-Z33, EX-Z77, EX-Z100, EX-Z150, EX-Z200, EX-Z300, EX-Z1080, EX-Z1200SR		✓							
EX-V8, EX-Z250, EX-Z270, EX-Z280, EX-Z400			✓						
EX-FC100, EX-FS10, EX-G1, EX-H10, EX-Z29						✓			
EX-F1, EX-FH20									✓
FUJI									
J30, Z10fd, Z20, Z33, Z100fd, Z200fd, Z300	✓	✓							
F50fd, F480, J10, J50, Z35, Z37		✓							
A100, A150, A170, F60fd, F100fd, F200EXR, J20, J100, J110W, J120, J150W, J250, Z30, Z33WP			✓						
A920, F70EXR					✓				
S1000fd, S1500								✓	
S2000HD, S5800, S8000fd, S8100fd									✓
KODAK									
M763, M863, M873, M883, M1063	✓	✓							
C763, M320, M340, M341, M893IS, M1033, M1073IS, M1093IS, V1073, V1273		✓							
C160, C180, C513, C913, C1013			✓						
Z915				✓					
C713, C813, M380, M381, Z1085IS, Z1275, Z1285, Z1485IS					✓				
V1253						✓			
Z712, Z950, Z1015IS, Z8612								✓	
Z980									✓
NIKON									
S51, S210, S220, S230	✓	✓							
L14, L15, S510, S550, S600, S620, S700		✓							
L19, L20, S51c, S52, S52c, S60, S70, S520, S560, S570, S610, S610c, S630, S640, S710, S1000PJ			✓						
P5100, P6000				✓		✓			
L16, L18, P60					✓				
L100, P80, P90									✓

<p>Find the perfect fit for your digital camera.</p>	 Neo's Digital 12 Model 3812	 Ultra-Thin Digital Model 5680	 Ultra-Compact Digital Model 5686	 Pro Compact Digital Model 5689	 Compact Digital Model 5690	 Digital 1 Model 5691	 Digital 2 Model 5692	 Digital 3 Model 5693	 Digital 6 Model 5696
OTHER MODELS		3453, 3582, 3583, 3584, 3803, 3814, 5204, 5412	3584, 3805, 5206, 5412		3586, 3807, 5214, 5290, 5415	3585, 5217, 5417	5292	5294	5230, 5682
Digital Cameras									
OLYMPUS									
FE280, FE320	✓	✓							
FE20, FE300, FE360, FE370, FE3000, FE3010, Stylus 840		✓							
FE25, FE45, FE290, FE340, FE350, FE5000, FE5010, FE5020, Stylus 550WP, 790SW, 820, 830, 850SW, 1010, 1020, 1030SW, 1040, 1050SW, 1200, 7000, 7010, Tough 6000, 6010, 8000			✓						
FE270, FE310, Stylus 9000					✓				
SP565UZ, SP570UZ, SP590UZ, SP650UZ									✓
PANASONIC									
FP8, FS3, FS5, FS6, FS7, FS12, FS15, FS20, FS25, FS62, FX33, FX35, FX37, FX48, FX55, FX65, FX100, FX150, FX500		✓							
FS42, FX580, TS1, ZR1			✓						
LX3, TZ4, TZ5, TZ50				✓		✓			
LS80, LS85, LZ8, LZ10, ZS1, ZS3					✓				
FZ18, FZ28, FZ35									✓
PENTAX									
S12	✓	✓							
A40, M40, M50, M60, M85, V10, WS80		✓							
E40, E50, E60, E70, E80, E85, P70, P80, S10, V20, W60, W80, Z10			✓						
X70									✓
SAMSUNG									
i8, L100, L110, L201, PL50	✓	✓							
CL5, ES55, i80, i100, L83T, L210, L310W, L730, L830, NV4, NV30, NV40, PL65, SL102, SL202, SL720, ST10, ST50		✓							
ES10, ES15, i85, NV8, NV9, NV15, NV20, NV24HD, S1070, SL420, SL620, SL820, TL220, TL225, TL320			✓						
HZ10W, HZ15W, TL100, WB500				✓			✓		
S85					✓				
SONY									
T2, T70	✓	✓							
G1, S750, S780, S950, S980, T77, T90, T200, T300, T700, T900, TX1, W120, W130, W150, W170, W220, W230, WX1		✓							
G3, S730, T500, W290, W300			✓						
H3, H20				✓			✓		
H50, HX1									✓