

Find the perfect fit for your digital camera.									
	Neo's Digital 12 Model 3812	Neo's Digital 14 Model 3814	Ultra-Compact Digital Model 5686	Pro Compact Digital Model 5689	Compact Digital Model 5690	Digital 1 Model 5691	Digital 2 Model 5692	Digital 3 Model 5693	Digital 6 Model 5696
<b>OTHER MODELS</b>		3582, 3584, 3817, 5204, 5680	3584, 3819, 5206		3586, 3821, 5214, 5290	3585	5292		5230, 5682
<b>Digital Cameras</b>									
<b>CANON</b>									
SD750, SD770IS, SD780IS, SD790IS, SD940IS, SD1400IS	✓	✓							
SD880IS, SD890IS, SD970IS, SD1200IS		✓							
A480, A490, A495, A1000IS, A1100IS, A3000IS, A3100IS, S90, SD1300IS, SD3500IS, SD960IS, SD980IS, SD990IS			✓						
A2000IS, A2100IS, E1, SX200IS, SX210IS				✓		✓			
A590IS, D10, G10, G11, SX100IS, SX110IS, SX120IS				✓			✓		
SX11S, SX10IS, SX20IS									✓
<b>CASIO</b>									
EX-Z80, EX-Z85, EX-Z90, EX-Z450	✓	✓							
EX-S5, EX-S10, EX-S12, EX-S770, EX-Z9, EX-Z33, EX-Z150, EX-Z200, EX-Z300		✓							
EX-S7, EX-Z35, EX-Z250, EX-Z270, EX-Z280, EX-Z400, EX-Z550, EX-Z2000			✓						
EX-FC100, EX-FH100, EX-FS10, EX-G1, EX-H10, EX-H15, EX-Z29						✓			
EX-F1, EX-FH20									✓
<b>FUJI</b>									
J30, Z33, Z70, Z100fd, Z200fd, Z300	✓	✓							
J10, J50, Z35, Z37		✓							
A100, A150, A170, F60fd, F100fd, F200EXR, J20, J100, J110W, J120, J150W, J250, J500, Z30, Z33WP			✓						
F70EXR, F80EXR, XP10, Z700EXR					✓				
S1000fd, S1500								✓	
S200EXR, S1600, S1800, S2000HD, S2500HD, HS10									✓
<b>KODAK</b>									
M763, M863, M873, M883, M1063	✓	✓							
M320, M340, M341, M1073IS, M1093IS		✓							
C160, C180, C913, C1013			✓						
C713, C813, M380, M381, Z1485IS					✓				
Z712, Z950, Z1015IS, Z8612								✓	
Z980									✓
<b>NIKON</b>									
S210, S220, S230, S3000, S4000	✓	✓							
L14, L15, S550, S600, S620, S700, S4000		✓							
L19, L20, L22, S51c, S52, S52c, S60, S70, S570, S610, S610c, S630, S640, S710, S1000PJ, S6000, S8000			✓						
P5100, P6000				✓		✓			
L16, L18, L21, P60					✓				
L100, L110								✓	
P80, P90, P100									✓

<p>Find the perfect fit for your digital camera.</p>	 Neo's Digital 12 Model 3812	 Neo's Digital 14 Model 3814	 Ultra-Compact Digital Model 5686	 Pro Compact Digital Model 5689	 Compact Digital Model 5690	 Digital 1 Model 5691	 Digital 2 Model 5692	 Digital 3 Model 5693	 Digital 6 Model 5696
<b>OTHER MODELS</b>		3582, 3584, 3817, 5204, 5680	3584, 3819, 5206		3586, 3821, 5214, 5290	3585	5292		5230, 5682
<b>Digital Cameras</b>									
<b>OLYMPUS</b>									
FE20, FE360, FE370, FE400, FE3000, FE3010, FE4030, FE4040, Stylus 5010		✓							
FE25, FE45, FE47, FE5000, FE5010, FE5020, FE5030, Stylus 550WP, 1040, 1050SW, 7000, 7010, 7030, 7040, Tough 6000, 6010, 6020, 8000, 8010			✓						
Stylus 9000, 9010, Tough 3000					✓				
SP565UZ, SP590UZ, SP600UZ, SP800UZ									✓
<b>PANASONIC</b>									
FP8, FS6, FS7, FS12, FS15, FS25, FS62, FX35, FX37, FX48, FX65, FX150, FX500		✓							
FP1, FP2, FP3, FS10, FS11, FS30, FS33, FS42, FX580, TS1, ZR1			✓						
LX3, TZ4, TZ5, TZ50, ZS5, ZS7				✓					
LS80, LS85, TS2, ZS1, ZS3					✓				
FZ18, FZ28, FZ35									✓
<b>PENTAX</b>									
A40, M40, M50, M60, M85, WS80		✓							
E60, E70, E80, E85, P70, P80, S10, V20, W60, W80			✓						
H90, I10, W90						✓			
X70									✓
<b>SAMSUNG</b>									
L100, L110, L201, PL50	✓	✓							
CL5, ES55, i80, i100, L310W, PL65, SL102, SL202, SL720, ST10, ST50		✓							
ES10, ES15, NV9, S1070, SL420, SL620, SL820, TL110, TL205, TL210, TL220, TL225, TL320			✓						
HZ10W, HZ15W, TL100, WB500				✓			✓		
CL80, HZ30W, HZ35W, TL240						✓			
HZ25W							✓		
<b>SONY</b>									
W350, W380	✓	✓							
S950, S980, T77, T90, T700, T900, TX1, TX5, W120, W130, W150, W170, W220, W230, W310, W320, W330, WX1		✓							
G3, S730, T500, W290, W300			✓						
HX5, S2000, S2100, TX7, W370					✓				
H55						✓			
H20						✓	✓		
HX1									✓