

Find the perfect bag for your digital camera.

	Neo's Digital 12 Model 3812 5680, 5204	Neo's Digital 14 Model 3814 5680, 5204	Ultra-Compact Digital Model 5686 3413, 3819, 5206	Pro Compact Digital Model 5689	Compact Digital Model 5690 3415, 3821, 5214	Digital 1 Model 5691	Digital 2 Model 5692 5292	Digital 3 Model 5693	Digital 6 Model 5696 3440, 5230, 5682

**OTHER MODELS**

**Digital Cameras**

**CANON**

Elph 300H, Elph 520HS, Elph 530HS, SD780IS, SD790IS, SD1400IS	✓	✓							
A2200IS, A2300, A2400IS, A3200IS, A3300IS, A3400IS, A4000IS, Elph 100HS, Elph 310HS, SD880IS, SD1300IS		✓							
A490, A495, A800, A810, A1000IS, A1100IS, A1300, A3000IS, A3100IS, Elph 510HS, S100, 110H, 320HS, SD3500IS, SD4000IS, SD980IS, SD990IS			✓						
A1200, Elph 500HS, S90, S95, SD4500IS					✓				
A2000IS, E1, SX210IS, SX220HS, SX230HS, SX240HS, SX260HS				✓		✓			
D20, G11, G12, SX110IS, SX120IS, SX130IS, SX150IS				✓			✓		
SX20IS, SX30IS, SX40IS, G1X									✓

**CASIO**

EX-Z90, EX-Z450, EX-Z800	✓	✓							
EX-S12, EX-S770, EX-Z9, EX-Z33, EX-Z150, EX-Z200, EX-Z300		✓							
EX-S7, EX-S200, EX-Z35, EX-Z280, EX-Z400, EX-Z550, EX-Z2000			✓						
EX-FH100, EX-G1, EX-H5, EX-H10, EX-H15, EX-H30, EX-S8, EX-Z16, EX-Z2300, EX-ZR100, EX-ZR200, EX-ZS5, EX-ZS10, EX-ZS15					✓				
TRYX				✓		✓			
EX-HG20, EX-ZR10				✓			✓		

**FUJI**

J30, Z70, Z300	✓	✓							
JV200, JX300, JX350, JX370, Z35, Z37, Z90, Z91		✓							
A170, AV200, AV250, AX200, AX205, AX350, J2500, T200, Z33WP, Z110			✓						
F80EXR, JX500, JX550, JZ100, JZ200, XP10, XP30, XP50, Z700EXR, Z800EXR					✓				
Real 3D W3, XP150				✓		✓			
F300EXR, F500EXR, F550EXR, F600EXR, F660EXR, F750EXR, F770EXR, T400, Z900EXR, Z1000EXR						✓			
S1600, S1800, S2500HD, X10, X100								✓	
S200EXR, S2950, S3200, S4000, SL240, SL300, SL4200, SL4500, HS10, HS20EXR, HS30EXR									✓

**KODAK**

EasyShare Mini, M1063	✓	✓							
M341, M530, M590		✓							
EasyShare Touch, M575, M5370			✓						
EasyShare Sport, M381, Z1485IS					✓				
M580, Z950								✓	
C135, Z981, Z990 Easy Share, Z5010, Z5120									✓

**NIKON**

S3000, S3300, S4000, S4300	✓	✓							
L22, L26, S52c, S70, S100, S570, S640, S1000PJ, S5100, S6000, S6200, S6300, S8000, S8200			✓						
L21, L24, P300, P310, S30, S80, S3100, S4100, S6100, S8100, S9100, S9300					✓				
AW100, S1100pj, S1200pj						✓			
P7000, P7100				✓			✓		
L110, L120, L810								✓	
P100, P500, P510									✓

Find the perfect bag for your digital camera.



Neo's Digital 12  
Model 3812  
5680, 5204



Neo's Digital 14  
Model 3814  
5680, 5204



Ultra-Compact  
Digital  
Model 5686  
3413, 3819, 5206



Pro  
Compact Digital  
Model 5689



Compact Digital  
Model 5690  
3415, 3821, 5214



Digital 1  
Model 5691



Digital 2  
Model 5692  
5292



Digital 3  
Model 5693



Digital 6  
Model 5696  
3440, 5230, 5682

**OTHER MODELS**

**Digital Cameras**

**OLYMPUS**

VG110	✓	✓							
FE400, FE4030, FE4040, FE5050, Stylus 5010, VG120		✓							
FE47, FE3035, FE5020, FE5030, FE5040, VG145, VG160, VR340, Stylus 7010, 7030, 7040, Tough 6020, 8000, 8010			✓						
Stylus 9010, TG310, TG320, TG610, TG810 TG820, Tough 3000, VR320, VR330					✓				
SZ10, SZ11, SZ30, SZ31				✓		✓			
XZ1, SZ12, SP620UZ				✓			✓		
SP610UZ								✓	
SP600UZ, SP800UZ, SP810UZ									✓

**PANASONIC**

FH2, FH5, FH6, FH7, FH8, FP8, FX65, FX66, S2		✓							
FH20A, FH25, FH27, FP1, FP2, FP3, FS10, FS11, FS30, FS33, FS42, FX78, LS5, S1, S3, SZ1, SZ7, TS20, ZR1			✓						
FP5, FP7, FX75, FX90, FX700, TS2, TS4, ZS8, ZS10, ZS15, ZS20					✓				
ZS5, ZS7				✓		✓			
TS3						✓			
GF2, LX5, 3D1				✓			✓		
FZ35, FZ40, FZ47, FZ100, FZ150									✓

**PENTAX**

E80, E85, M90, P80, RZ18			✓						
H90, I10, W90						✓			
WG1, WG2, RS1500, S1, VS20				✓			✓		
X90									✓

**SAMSUNG**

ST80, TL105	✓	✓							
AQ100, MV800, SL720, ST30, ST65, ST66, ST90, ST93, ST95		✓							
PL200, TL110, TL205, TL210, TL220, TL225, TL350			✓						
CL80, HZ30W, HZ35W, TL240					✓				
ST6500, TL500, WB750				✓		✓			
NX11								✓	
HZ25W, HZ50W									✓

**SONY**

W350, W380	✓	✓							
T99, T110, TX1, TX5, TX10, TX55, W310, W320, W330, W530, W550, W610, W620, W650, WX1, WX5, WX30, WX50, WX70		✓							
TX100V, TX200V			✓						
H55, H70, HX5, HX7V, HX9V, S2000, S2100, TX7, TX9, W370					✓				
HX100V									✓